




# Dell Studio 1737 Speaker Replacement

Replacement and removal of both Laptop speakers.

Written By: Joseph Jacavone

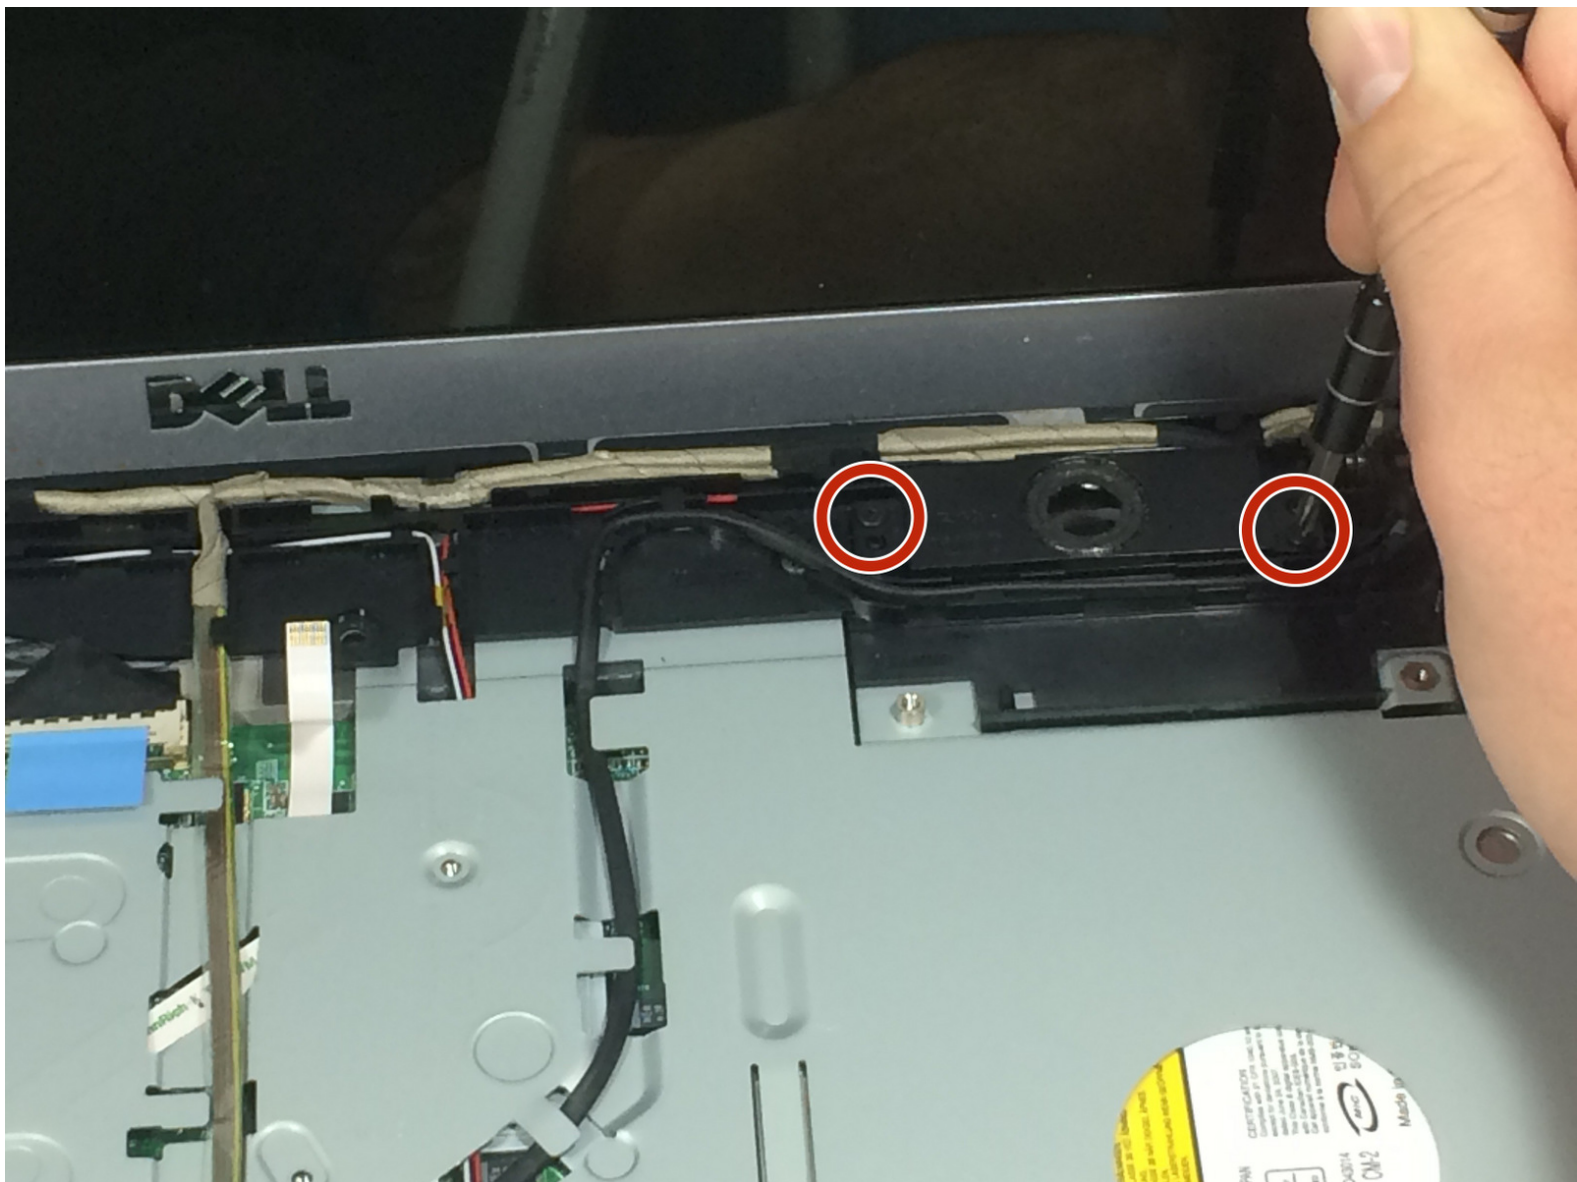

## INTRODUCTION

This guide will demonstrate how to remove or replace the speakers in a Dell Studio 1737 laptop

---

### TOOLS:




- [Philips Head Screwdriver: Size PH1](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Slide the battery release slider all the way to the right and push the battery straight out of the back of the computer


## Step 2 — Back Panel

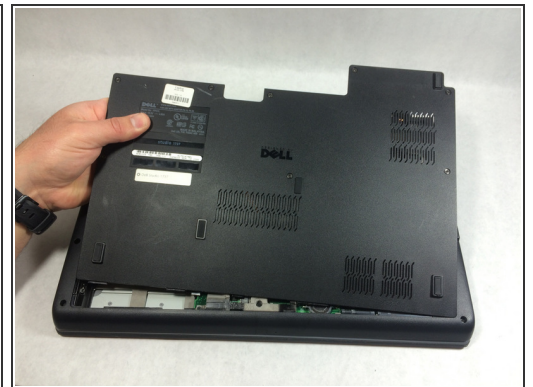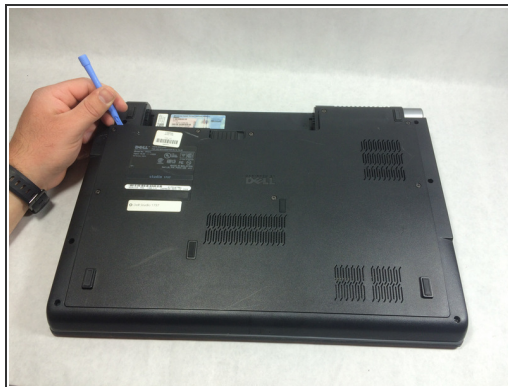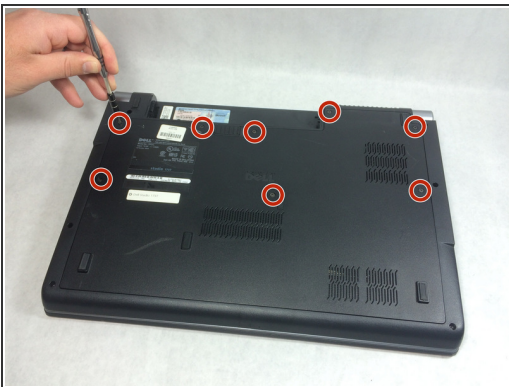

- Unscrew the 8 Phillips head screws marked in the photo
- ⓘ Even when the screws are fully detached, they will not come out of the panel
- Use a plastic opening tool to pry the panel away from the laptop body
- Lift panel up and away




## Step 3 — Keyboard

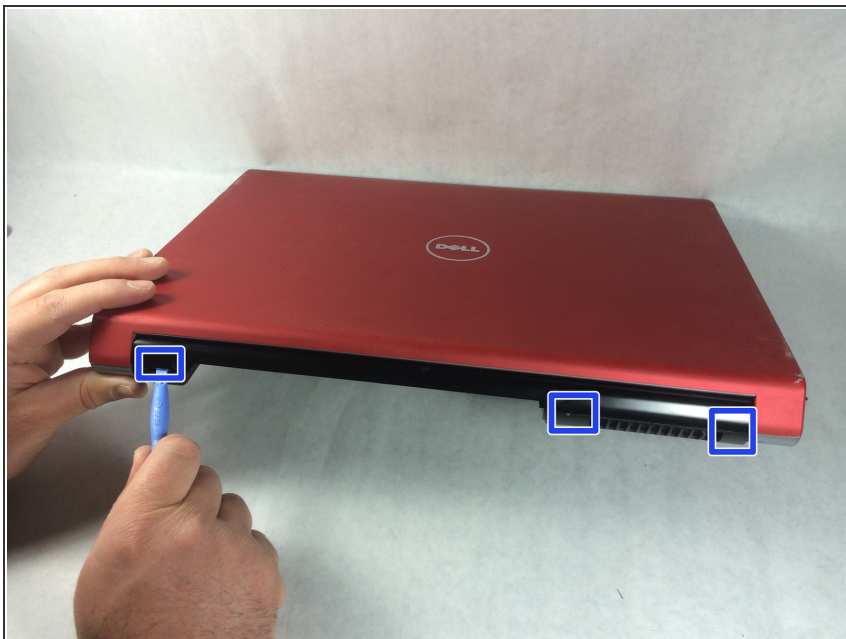

- Use a plastic opening tool to detach the internal clips (marked with red boxes in photo) and release the small plastic panel above the keyboard




**i** This panel doesn't come off just yet, this step is just to make it easier when it comes time to remove it

## Step 4

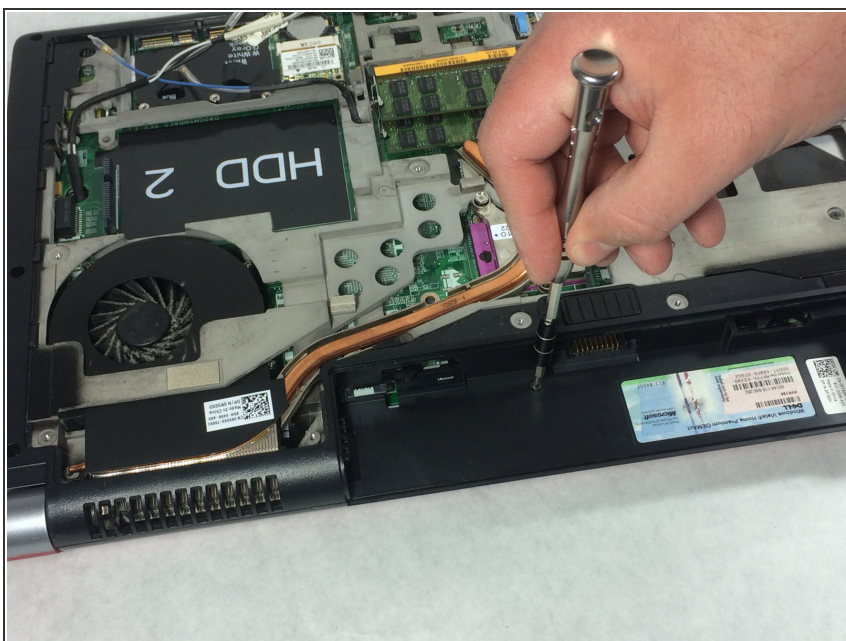

- Remove the 4mm ph1 screw under the battery

## Step 5

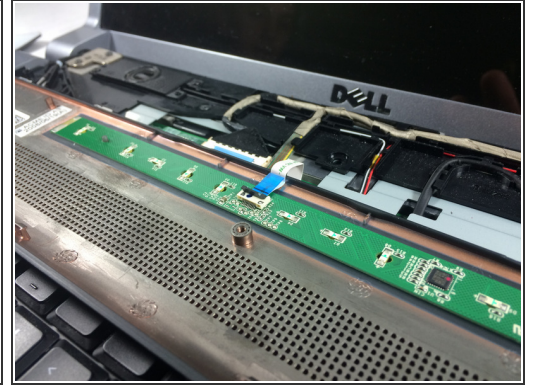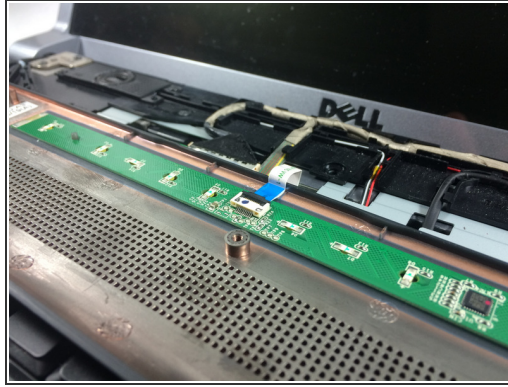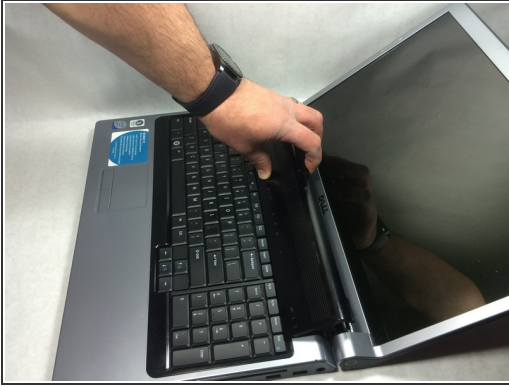

- Pry black panel away from laptop body starting at the base of the screen
- ⚠ Be careful when flipping the panel over, as the panel is still attached by the fragile ribbon cable
- Flip the panel over onto the keyboard
- Detach the ribbon cable from the motherboard as shown



## Step 6



- Starting at the top where you just removed the black panel, pry the black bezel away from the outside of the keyboard





## Step 7

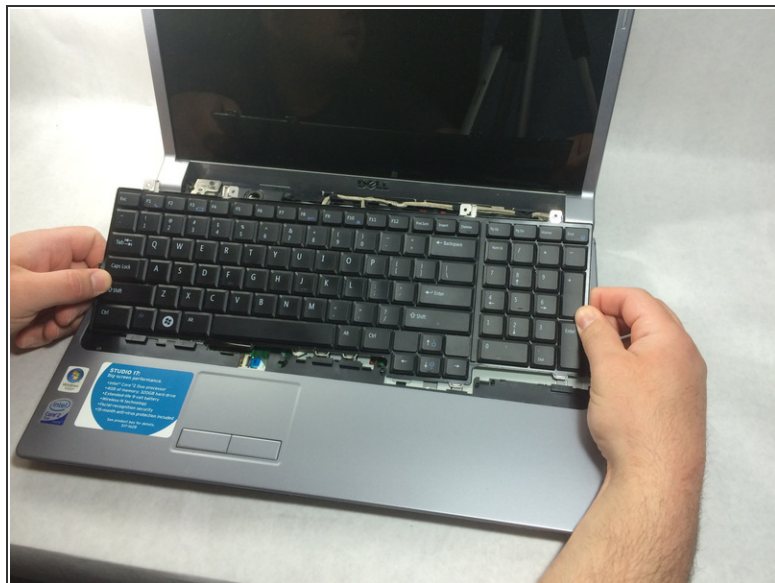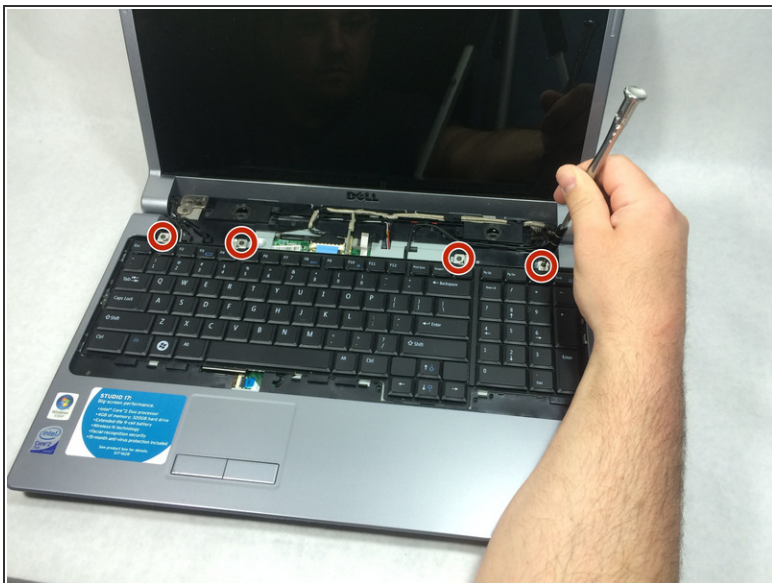


- Use a small screwdriver to take out the 4 4mm ph1 screws along the top of the keyboard
  - Lift from the top of the keyboard and flip it over onto the palmrest
- ⚠ Again, be very careful of the ribbon cable attaching it, as these are easily damaged

## Step 8

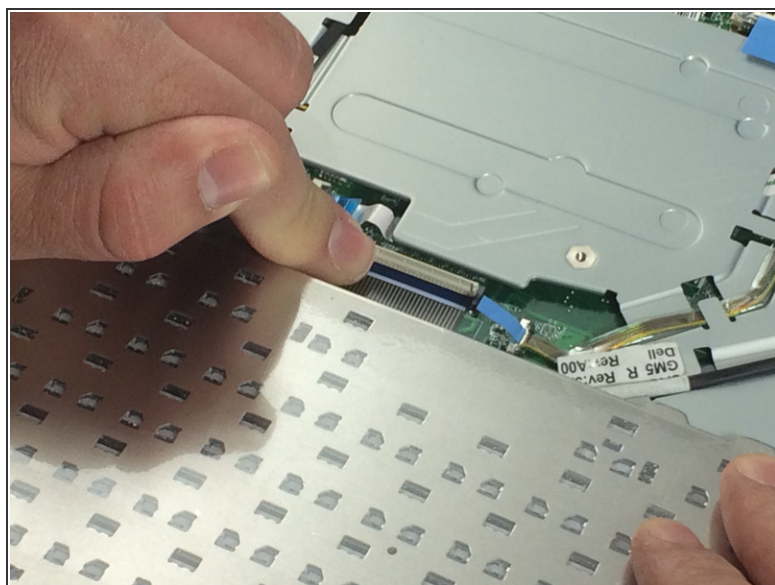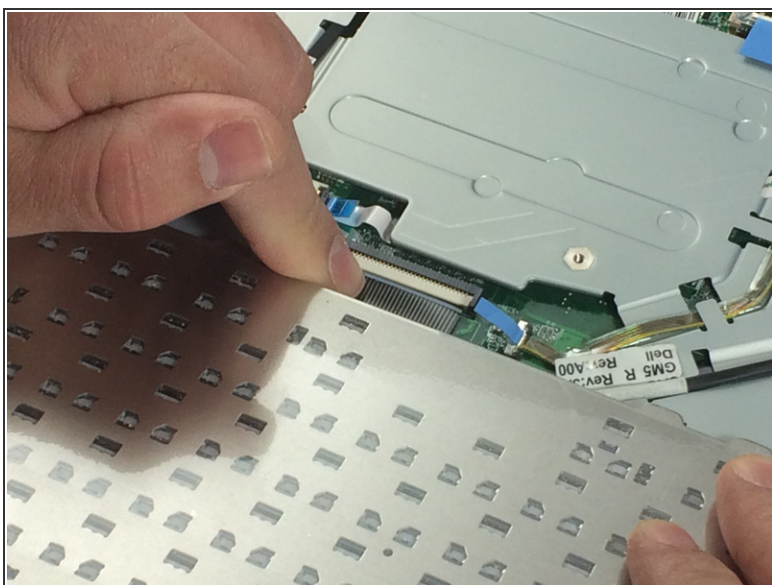


- Remove the ribbon cable as shown

## Step 9 — Palmrest Assembly

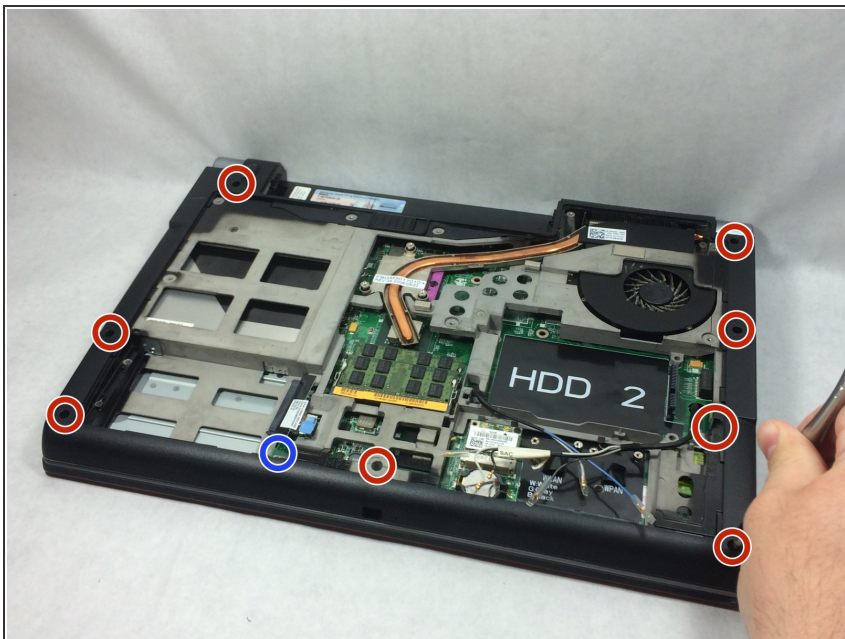

- Remove the 8 8mm ph1 philips head screws (red)
- Remove also the one 4mm ph 1 philips head screw (blue)


## Step 10

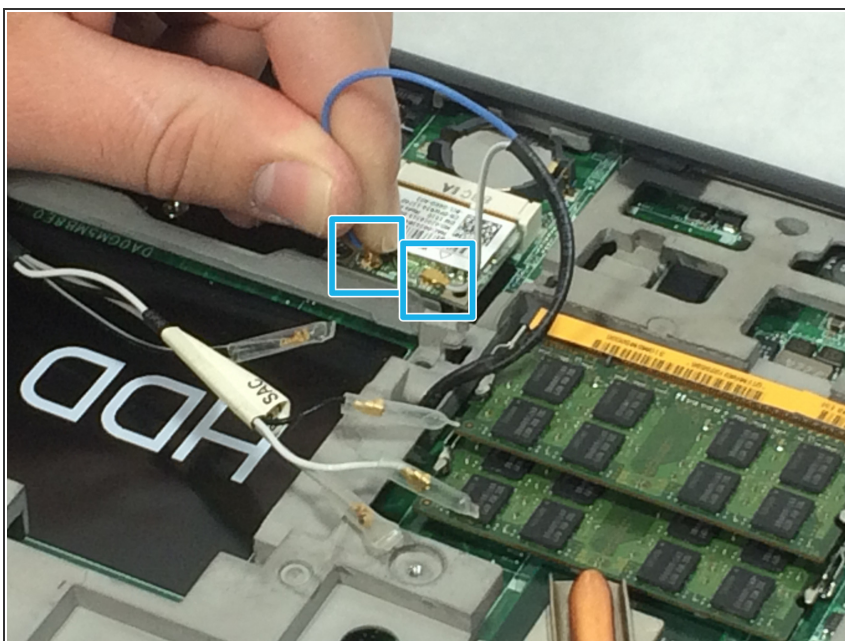

- Pull the antenna cables off of the wireless card(s)
- ⓘ Depending on the setup of the laptop, there may be as many as 3 wireless cards, and all of the antennas must be detached




## Step 11

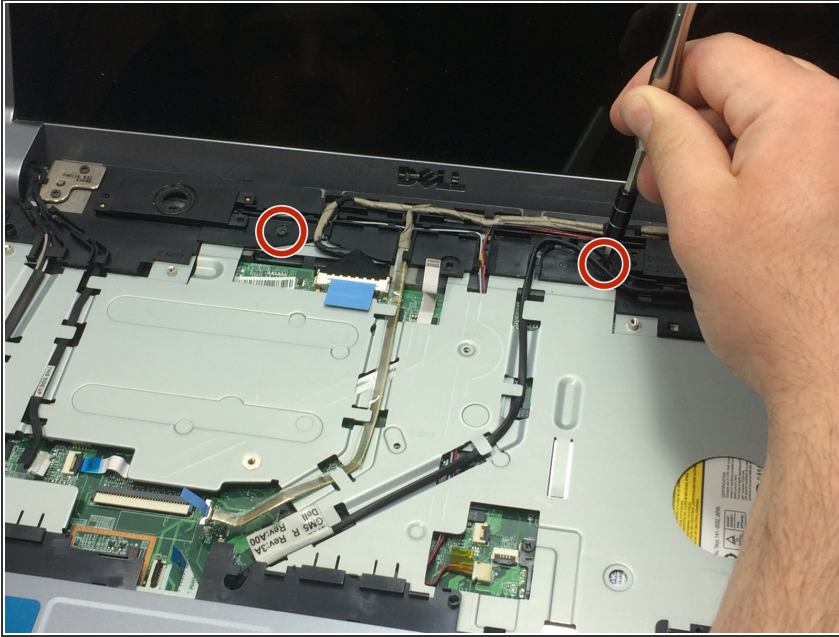

- Remove the two 4mm ph1 screws along the black panel to which the speakers are attached
- One of the screws is located under a wire channel and can be difficult to spot, look closely at the photo to make sure you get the right one

## Step 12

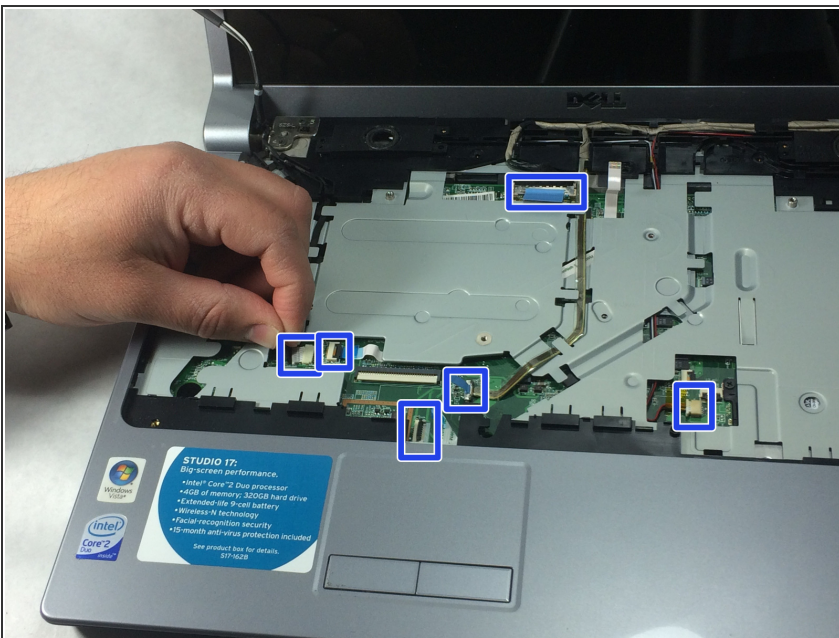

- Unplug the 6 marked cables from the motherboard
- ⓘ The connectors that aren't standard plugs or ribbon cables are detached by simply lifting straight up away from the computer
- Pull the antenna cables out through the motherboard, free them from their cable channels, and route them in such a way that they don't interfere with the next step





## Step 13





- Using a plastic opening tool, pry the palmrest away from the body of the laptop all the way from one hinge to the other, disconnecting all of the internal clips along the way
- Lift the palmrest up and off of the laptop
- ⓘ A small piece of this panel will get caught under the attachment point for the left hinge, just slide the panel slightly to the right to free it

## Step 14 — Speaker

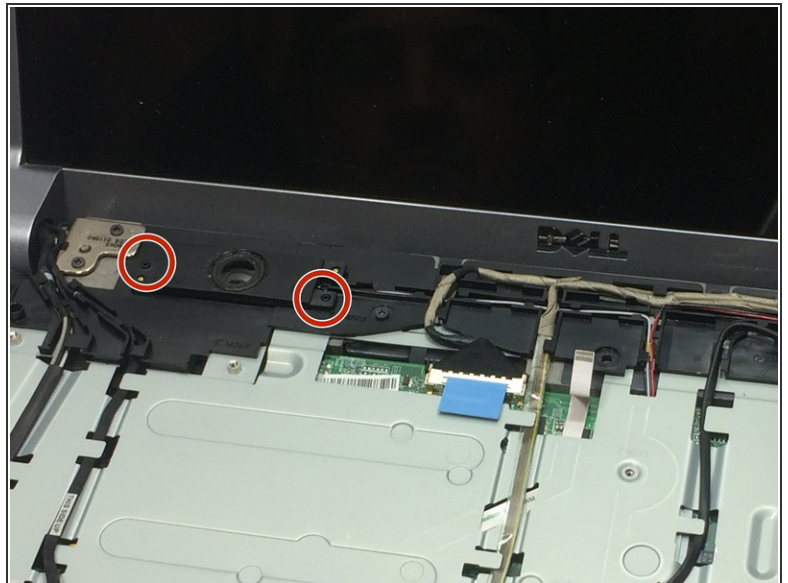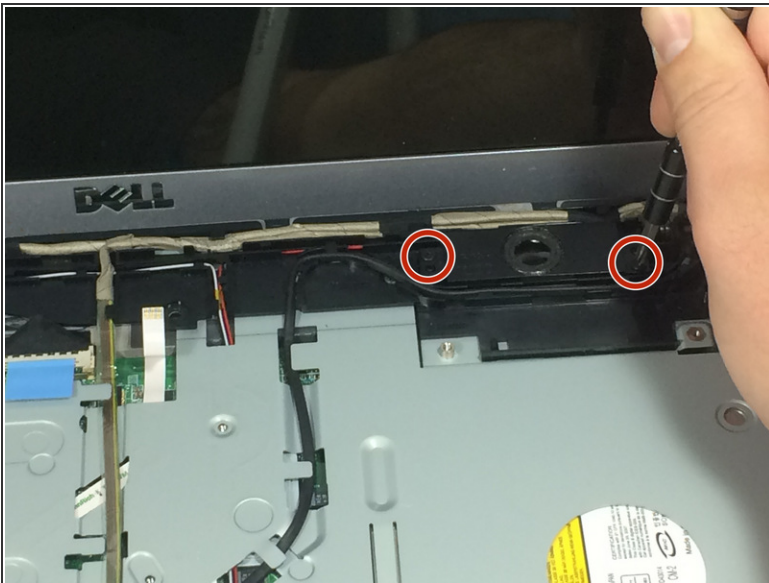

- Remove all four 4mm ph1 screws holding in the speakers

## Step 15

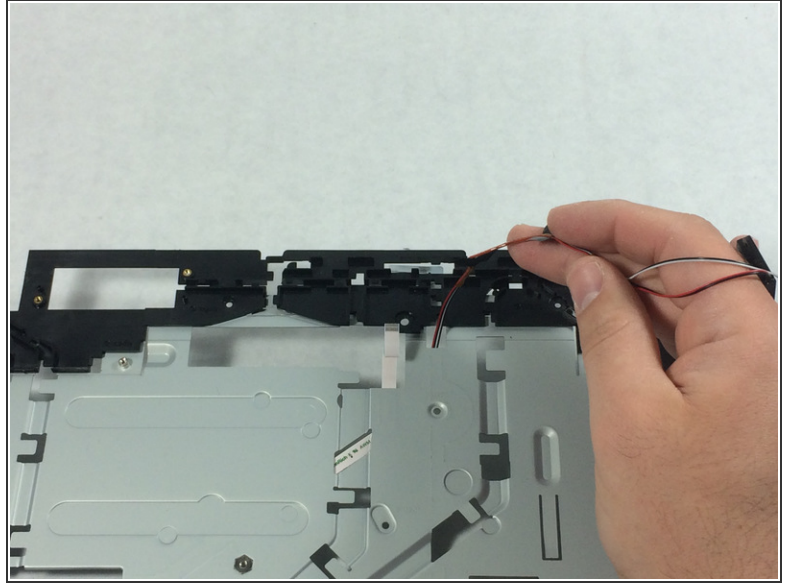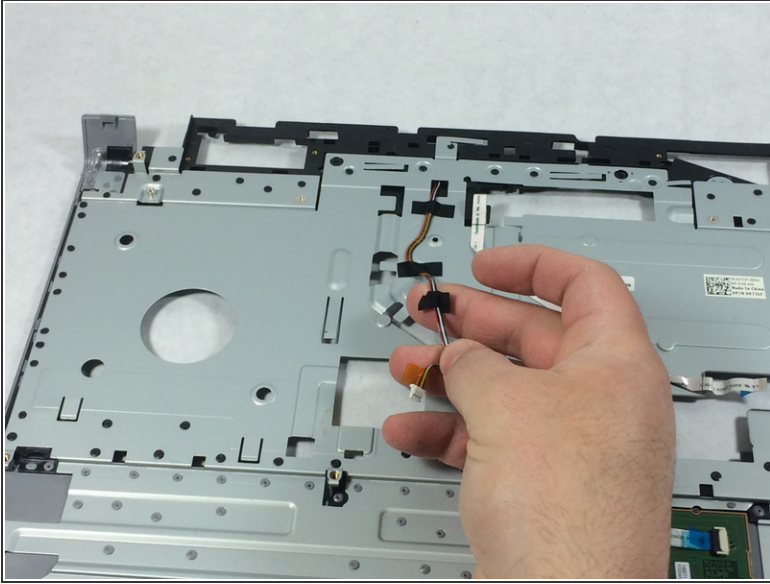

- Peel speaker cables off of the bottom of the palmrest, and route the cable through it such that the speakers are free

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-31 12:25:05 PM.